

Vista VX3085

GRAPHIC BANNER



ASSEMBLY INSTRUCTIONS

1. Turn base over and remove pole.
2. Twist out both feet until facing forward.
3. Open out scissor section pole and insert into base.
4. Lift the top rail and pull to raise the graphic from the base.
5. lean the banner stand backwards and continue to extend the graphic.
6. Secure the extended graphic by locating the hook on the top rail and fitting onto the pole

NOTE: Always handle graphic with care. Slowly feed graphic into cassette when retracting.

Tel: 0116 2047751